

131 County Rd. 34 E. Jackson MN, 56143 1.800.446.8222 www.eagleplows.com

2831 – John Deere Gator 6x4 Plow Mount

PLOW MOUNT INSTALLATION (use attached page to help with part identification during installation)

- STEP 1: The combination winch and plow mount will replace the stock bumper on your Gator. You will need to remove the larger front shroud and reattach when all done.
- STEP 2: Remove the original bumper and attach the new combination mount (Item 1) with the original hardware from the stock bumper. The four ears should be on the bottom and the winch mounting on the top.
- STEP 3: Place the winch (if ordered) over the top of the winch mount with the cable feeding out from the bottom of the winch and towards the roller fairlead mounting holes.
- STEP 4: Align the base of the winch to the bolt pattern on the winch mount and use the bolts supplied with the winch to fasten it to the plate.
- STEP 5: Install the roller fairlead by first removing the bottom "large" roller to run the cable through.
- STEP 6: Attach the fairlead with two 5/16 x 1" bolts, nylock nuts and flat washers supplied with the winch.
- STEP 7: Reinstall the bottom roller and tighten. Make sure the roller turns freely after tightening all the bolts.
- STEP 8: Wire the winch according to the manufacturer's specifications.

ATTACHING THE PUSH TUBE

- STEP 1: Roll the Gator over the push tube assembly.
- STEP 2: Lift the push tube up to the plow mount and line the holes up on the push tube and ears on the plow mount.
- STEP 3: Insert 3/4" pins (Item 2) into the holes and snap the hair pin clips (Item 3) into the 3/4" pins.

REMOVING THE PUSH TUBE

Reverse the above listed steps to remove the push tube. Once the 3/4" pins are removed, place back into the holes on the push tube assembly with the hair pin clips so they are not lost when the plow is not in use.

Periodically check all mounting hardware to make sure the mount is properly secured to the Gator.

It is the operator's responsibility to periodically check all fasteners/mounting hardware to ensure none have come loose during use and to check for any signs of wear.

Do NOT plow at speeds over 5mph. Doing so will void warranty on any parts that become damaged or break.

HDW1673 Rev. 0

ITEM NO.	PART NUMBER	QTY.	DESCRIPTION
1	2831-6	1	PLOW MOUNT
2	HDW1260	2	CLEVIS PIN, 3/4 X 2, ST,ZN
3	HDW1261	2	HAIRPIN, Ø1/8 X 2-1/2" Z

