131 County Rd. 34 E. Jackson MN, 56143 1.800.446.8222
www.hitchdocoutdoors.com

28020 - CF Moto U10 Plow Mount

Use the attached page to help with part identification during installation. We recommend using Loctite (Blue) on all fasteners.

Tools:	Ratchet
13mm Socket	15mm Socket

Plow Mount Installation:

STEP 1: Using 13mm socket, loosen both upper bumper bolts & remove the two lower OEM bumper bolts.

STEP 2: Pull the bottom of the bumper outward so you can raise the plow mount (Item 1) up to the frame of the machine. Install (2) M10 bolts (Item 4) up through the bottom of the plow mount into the frame. Do fully tighten at this time.

STEP 3: Allow the bumper back down and align the bumper, mount and frame holes. Install the remaining M10 bolts (Item 4) through the aligned holes. Do not fully tighten at this time.

NOTE: You may have to remove some material from the top of the lower bumper bolt hole for proper clearance.

STEP 4: Square the mount up to the front of the machine and then fully tighten all of the hardware working in a crisscross pattern to keep the mount straight.

Attaching the Push Tube to the Plow Mount:

STEP 1: Roll the UTV over the push tube assembly.

STEP 2: Lift the push tube up to the plow mount and line the holes in the ears on the push tube up with the holes in the ears on the plow mount.

STEP 3: Insert each of the 3/4 x 2” clevis pins (Item 2) though the holes and secure in place using the hair pin clips (Item 3).

STEP 4: Attach the lift system of choice and the plow is ready for use.


Removing the Push Tube from the Plow Mount:

Reverse the previous steps to remove the push tube. Once the 3/4” pins are removed, place them back into the holes on the push tube assembly with the hair pin clips to prevent them from getting lost when the plow is not in use.

It is the operator's responsibility to periodically check all fasteners/mounting hardware to ensure none have come loose during use and to check for any signs of wear.

Do NOT plow at speeds over 5mph. Doing so will void warranty on any parts that become damaged or break.

ITEM NO.	PART NUMBER	QTY.	DESCRIPTION
1	28020-4	1	PLOW MOUNT WLDMNT, UT10
2	HDW1260	2	CLEVIS PIN, 3/4 X 2, ST,ZN
3	HDW1261	2	HAIRPIN, Ø1/8 X 2-1/2" Z
4	HDW3194	4	BOLT, M10X1.5 X 35MM SER FLG, Z

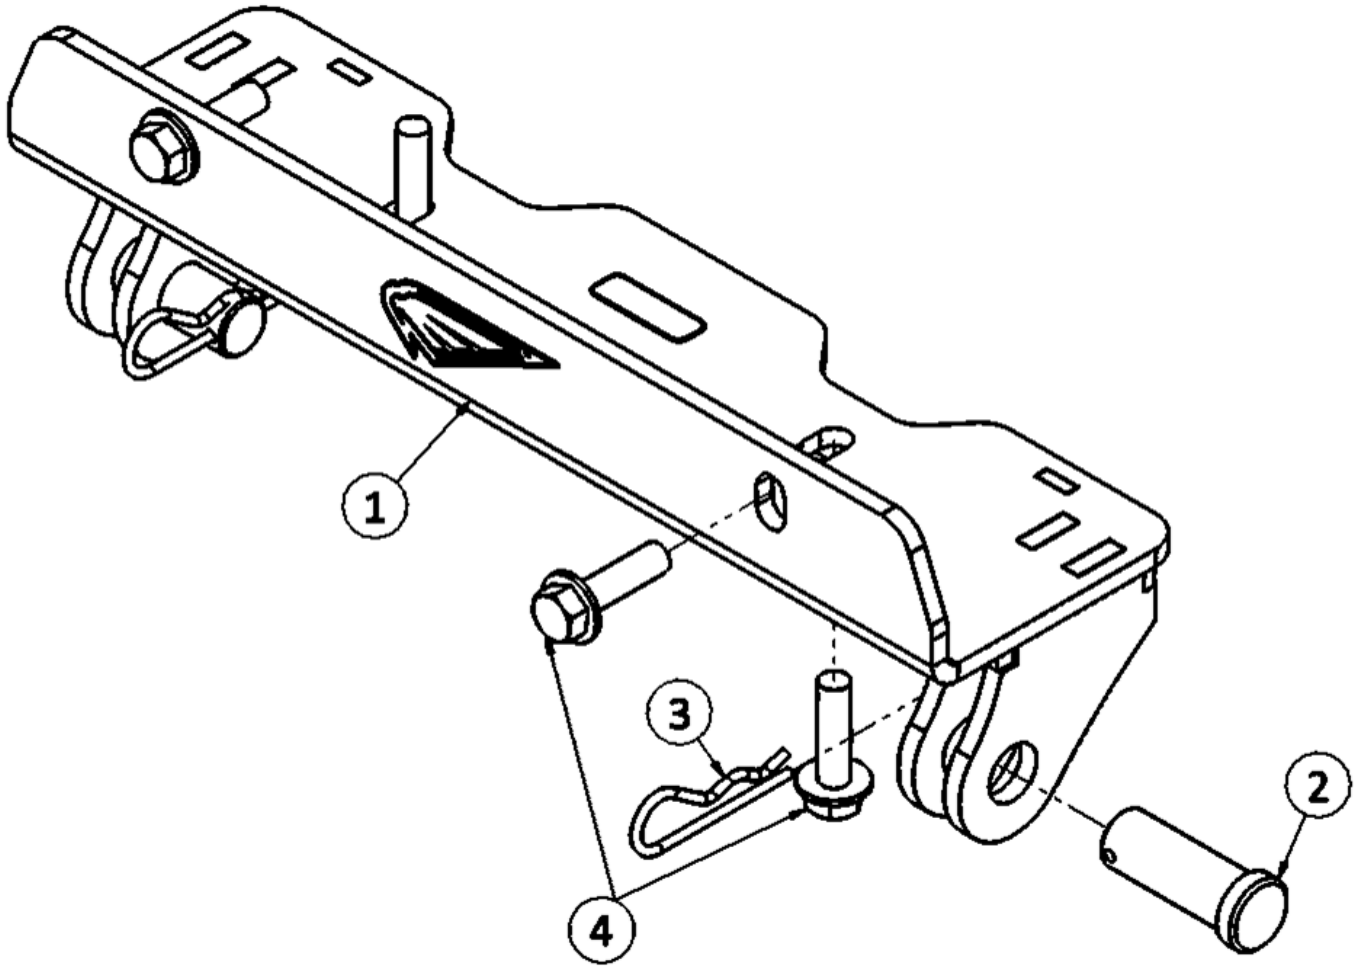

All hardware is a part of HDW3335 hardware kit.